

Meet your Jetpack.



MiFi 7730L

About your Jetpack




WARNING! Please use only an approved charger to charge your Jetpack. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your device and void the warranty.

NOTE: Appearance of device may vary.



Device display

Home screen

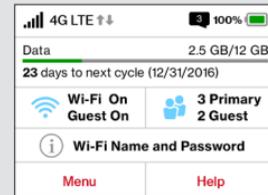

Connection status

	Network Signal Strength Indicator
	Data is being transferred between the mobile network and your Jetpack.
	Roaming Indicator
	You have unread messages.
	Your Jetpack Wi-Fi network is turned ON.
	Shows the number of Wi-Fi devices connected to your Jetpack.

Battery and SIM status

Indicator	Status
	Green The battery is fully charged.
	Red There is no battery installed.
	Red The battery is low and needs to be recharged for the Jetpack to continue operation.
	Red The battery is critically low and the Jetpack will shut down unless the battery is connected to the charger.
	Black The Jetpack is connected to an AC charger and charging.
	Grey The Jetpack is connected via USB and charging.
	Red There is no SIM installed in the Jetpack.
	Red There is a SIM error. Check for proper installation.
	Red The SIM card is locked.

Other icons

	Settings
	Universal Charging
	MiFi Share: USB Mass storage device in use
	Software Update
	About Jetpack
	Help

